

Quick Installation Guide:

Using a flat blade screwdriver, apply downward and rearward pressure on front edge of factory rear sight body. Rear sight is removed by sliding down and back out of the rear sight block.

Use flat blade screw driver to compress leaf spring while applying forward pressure to KNS rear sight until it snaps forward and fully seats in the rear sight block.

For detailed installation manual, please refer to www.knsprecisioninc.com